
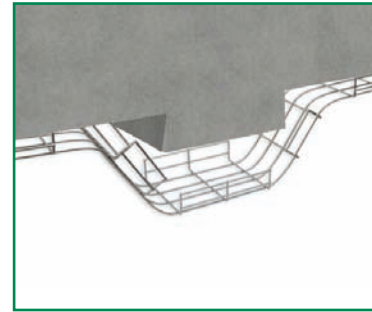


APPLICATION INSTRUCTIONS

LEVEL CHANGE


When installing in areas where walls and ceilings make sudden drops or changes in elevation utilize the cable tray to form a level change. Level changes are formed by cutting strategic sections of tray and bending accordingly.

Table 1

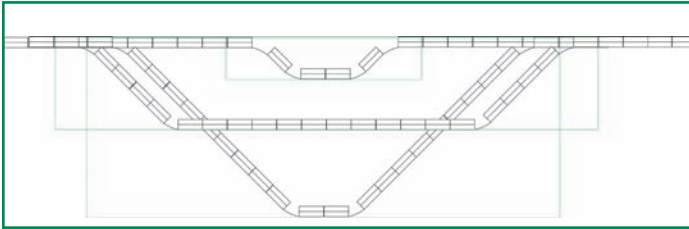


Level Change

REMOVE

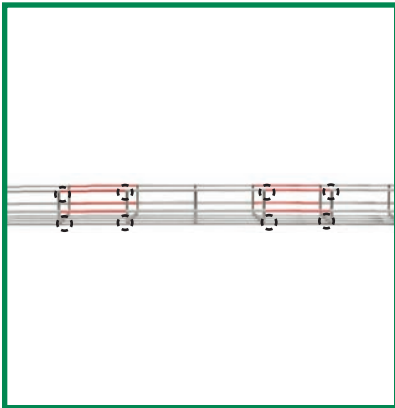


Remove sections of tray where you want the bend to occur. Leaving every other section uncut makes for a more rigid and useful bend.

BEND

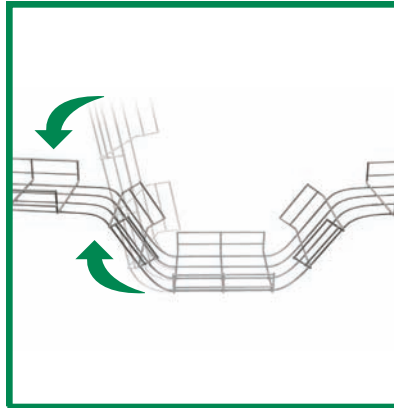

Bend the loose ends of tray until they form the desired form. Rebending a particular section more than twice may weaken the cross wires.

SECURE

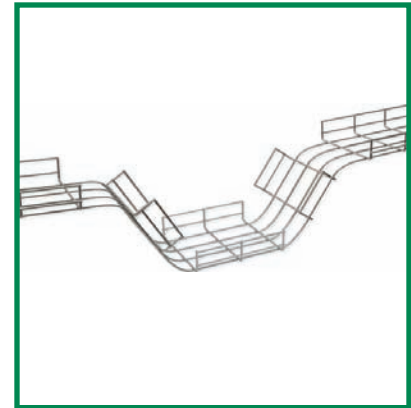

Secure the cable tray as close to the bend as possible to make certain the bent areas are properly anchored.

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND IS THE PROPERTY OF CHALFANT MANUFACTURING COMPANY. THE CONTENTS OF THIS DOCUMENT SHALL NOT BE DISCLOSED, COPIED AND OR PUBLISHED WITHOUT THE WRITTEN CONSENT OF CHALFANT MANUFACTURING COMPANY.

CHALFANT
Manufacturing Company

50 Pearl Road, Suite 212
Brunswick, OH. 44212
Phone: (330) 273-3510, Fax: (330) 273-8149
Web: www.ChalfantCableTray.com
Email: Sales@ChalfantCableTray.com