

APPLICATION INSTRUCTIONS

CENTER HUNG SUPPORT

Center Hung Supports should be mounted on either end of the length of cable tray. You will need (2) Tab System Profile Brackets for each length of tray. (WMxx263)

FOLD DOWN




Fold down tabs (using a screwdriver) locking tray in place.



Center Hung


* NOTE: For center hung assemblies a plastic protective tube is slid over the threaded rod before application.

INSERT

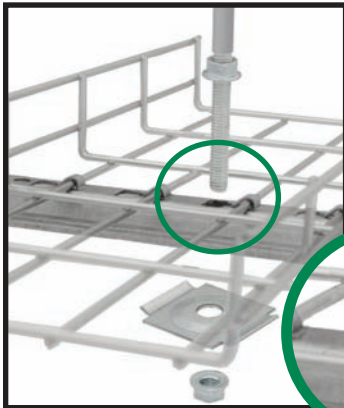


Insert the threaded rod (with a nut twisted on about 2" from the bottom) into the center TAB slot of the profile bracket.

SECURE

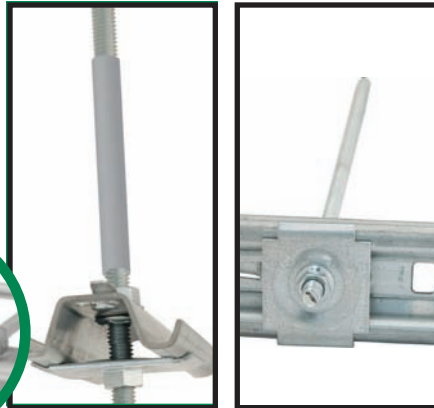

Secure the rod to the bottom of the profile bracket by sliding on the accompanying hold down clamp (as shown above) followed by a nut.

HANG

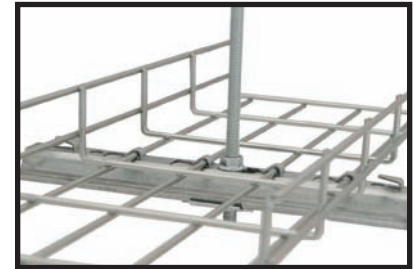

When hanging a center hung configuration, use one Threaded Rod and accompanying hardware and mount on either end.

Use proper loading installation guidelines - VE2 * Maximum Span 5- 6'

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND IS THE PROPERTY OF CHALFANT MANUFACTURING COMPANY. THE CONTENTS OF THIS DOCUMENT SHALL NOT BE DISCLOSED, COPIED AND OR PUBLISHED WITHOUT THE WRITTEN CONSENT OF CHALFANT MANUFACTURING COMPANY.

CHALFANT
Manufacturing Company

50 Pearl Road, Suite 212
Brunswick, OH. 44212
Phone: (330) 273-3510, Fax: (330) 273-8149
Web: www.ChalfantCableTray.com
Email: Sales@ChalfantCableTray.com