

APPLICATION INSTRUCTIONS

Y INTERSECTION

Y Intersections are used as an exit or entrance into a main cable run. You will need (1) 90 degree splice bracket kit (**WM90BKG**) and (1) Reinforcing Splice bar kit (**WMREMFKIT**).


Table 1

Tray Width		Cut Sections
Inches	Metric [mm]	
4	100	2
6	150	2
8	200	3
12	300	4
16	400	5
18	450	5
20	500	6
24	600	7




Y Intersection

REMOVE

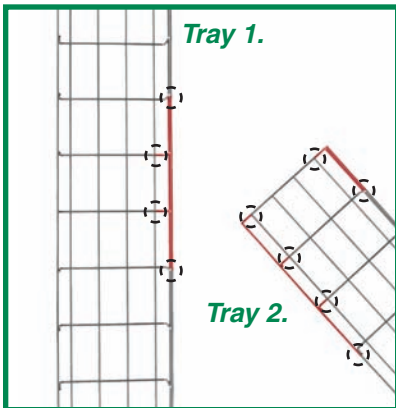


Remove the required number of sections from Tray 1 (as indicated in Table 1). Then remove the sides from Tray 2 as shown above.

ALIGN

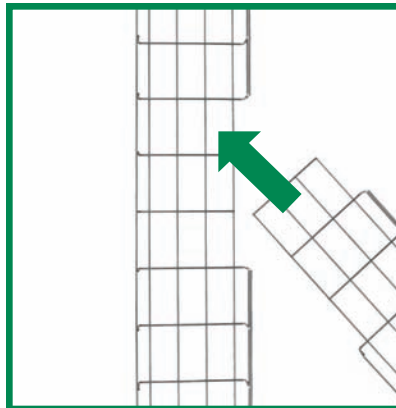

Align the two sections of tray so that Tray 2 enters Tray 1 at an angle.

SECURE

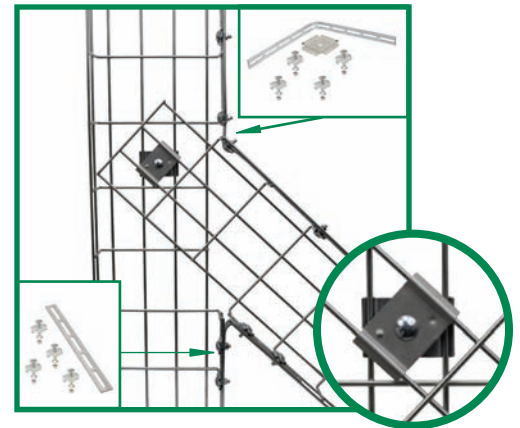

Secure the center bottom sections of tray using two hold down clamps included in the 90 degree bracket kit (WM90BKG). Bend the two splice bars to form the desired angle for the inside and outside bends and secure in place. (WM-REMFKIT)

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND IS THE PROPERTY OF CHALFANT MANUFACTURING COMPANY. THE CONTENTS OF THIS DOCUMENT SHALL NOT BE DISCLOSED, COPIED AND OR PUBLISHED WITHOUT THE WRITTEN CONSENT OF CHALFANT MANUFACTURING COMPANY.

CHALFANT
Manufacturing Company

50 Pearl Road, Suite 212
Brunswick, OH. 44212
Phone: (330) 273-3510, Fax: (330) 273-8149
Web: www.ChalfantCableTray.com
Email: Sales@ChalfantCableTray.com